

Schemat podłączenia do instalacji samochodu


STAG-4 QBOX BASIC

10R - 03 6616
67R - 01 4903
110R - 00 4904

"04-112.95.00.5 z dn. 13.01.2021"



AC S.A.
15-181 Białystok, ul. 42 Pułku Piechoty 50
tel. +48 85 743 81 00, fax +48 85 653 93 83
www.ac.com.pl | info@ac.com.pl

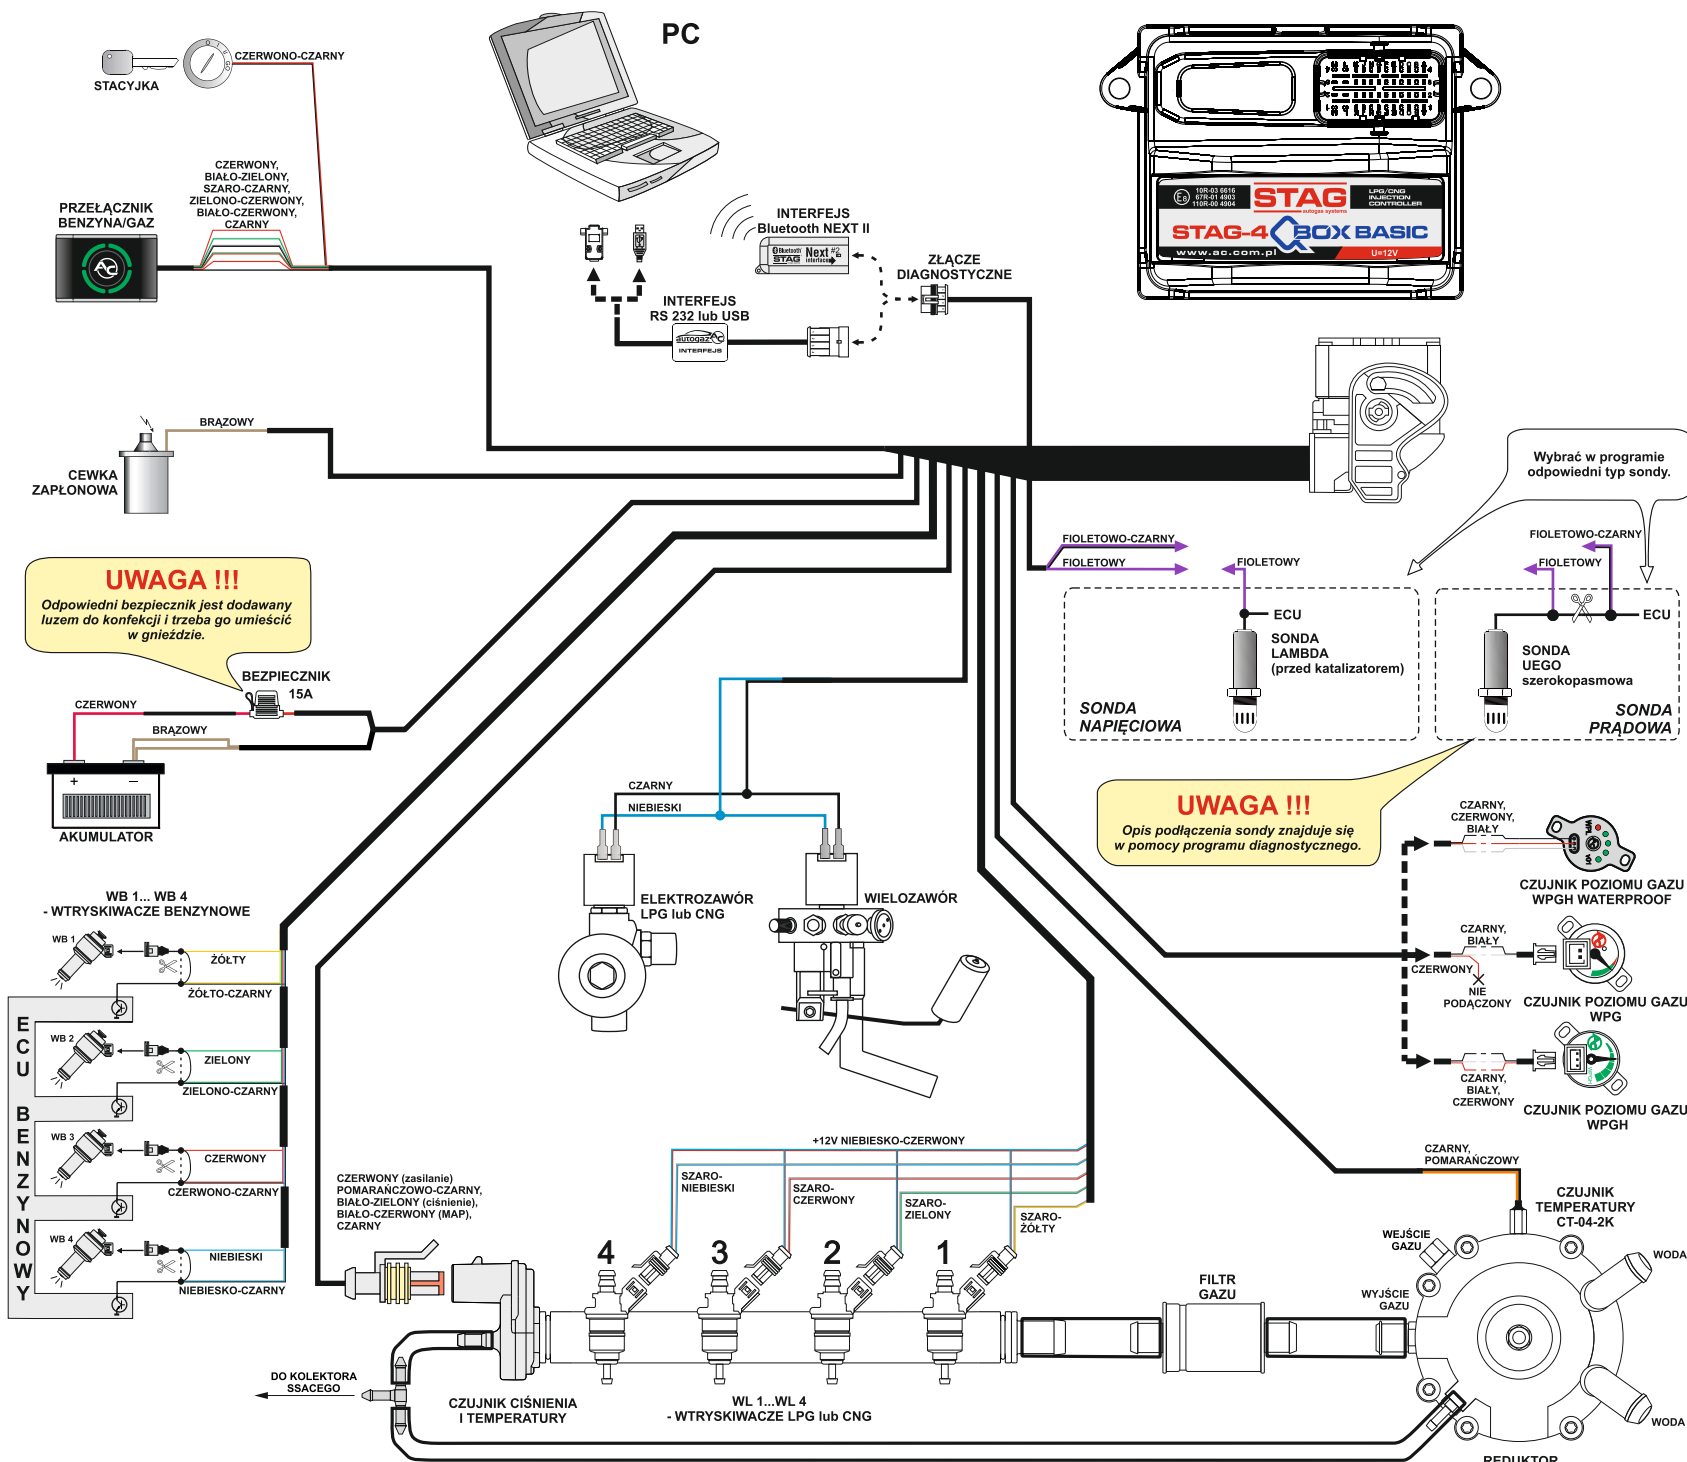

Wiring diagram

STAG-4 QBOX BASIC

10R - 03 6616
67R - 01 4903
110R - 00 4904

"04-112.95.00.5 z dn. 13.01.2021"



AC S.A.
15-181 Białystok, ul. 42 Pułku Piechoty 50
tel. +48 85 743 81 00, fax +48 85 653 93 83
www.ac.com.pl | info@ac.com.pl


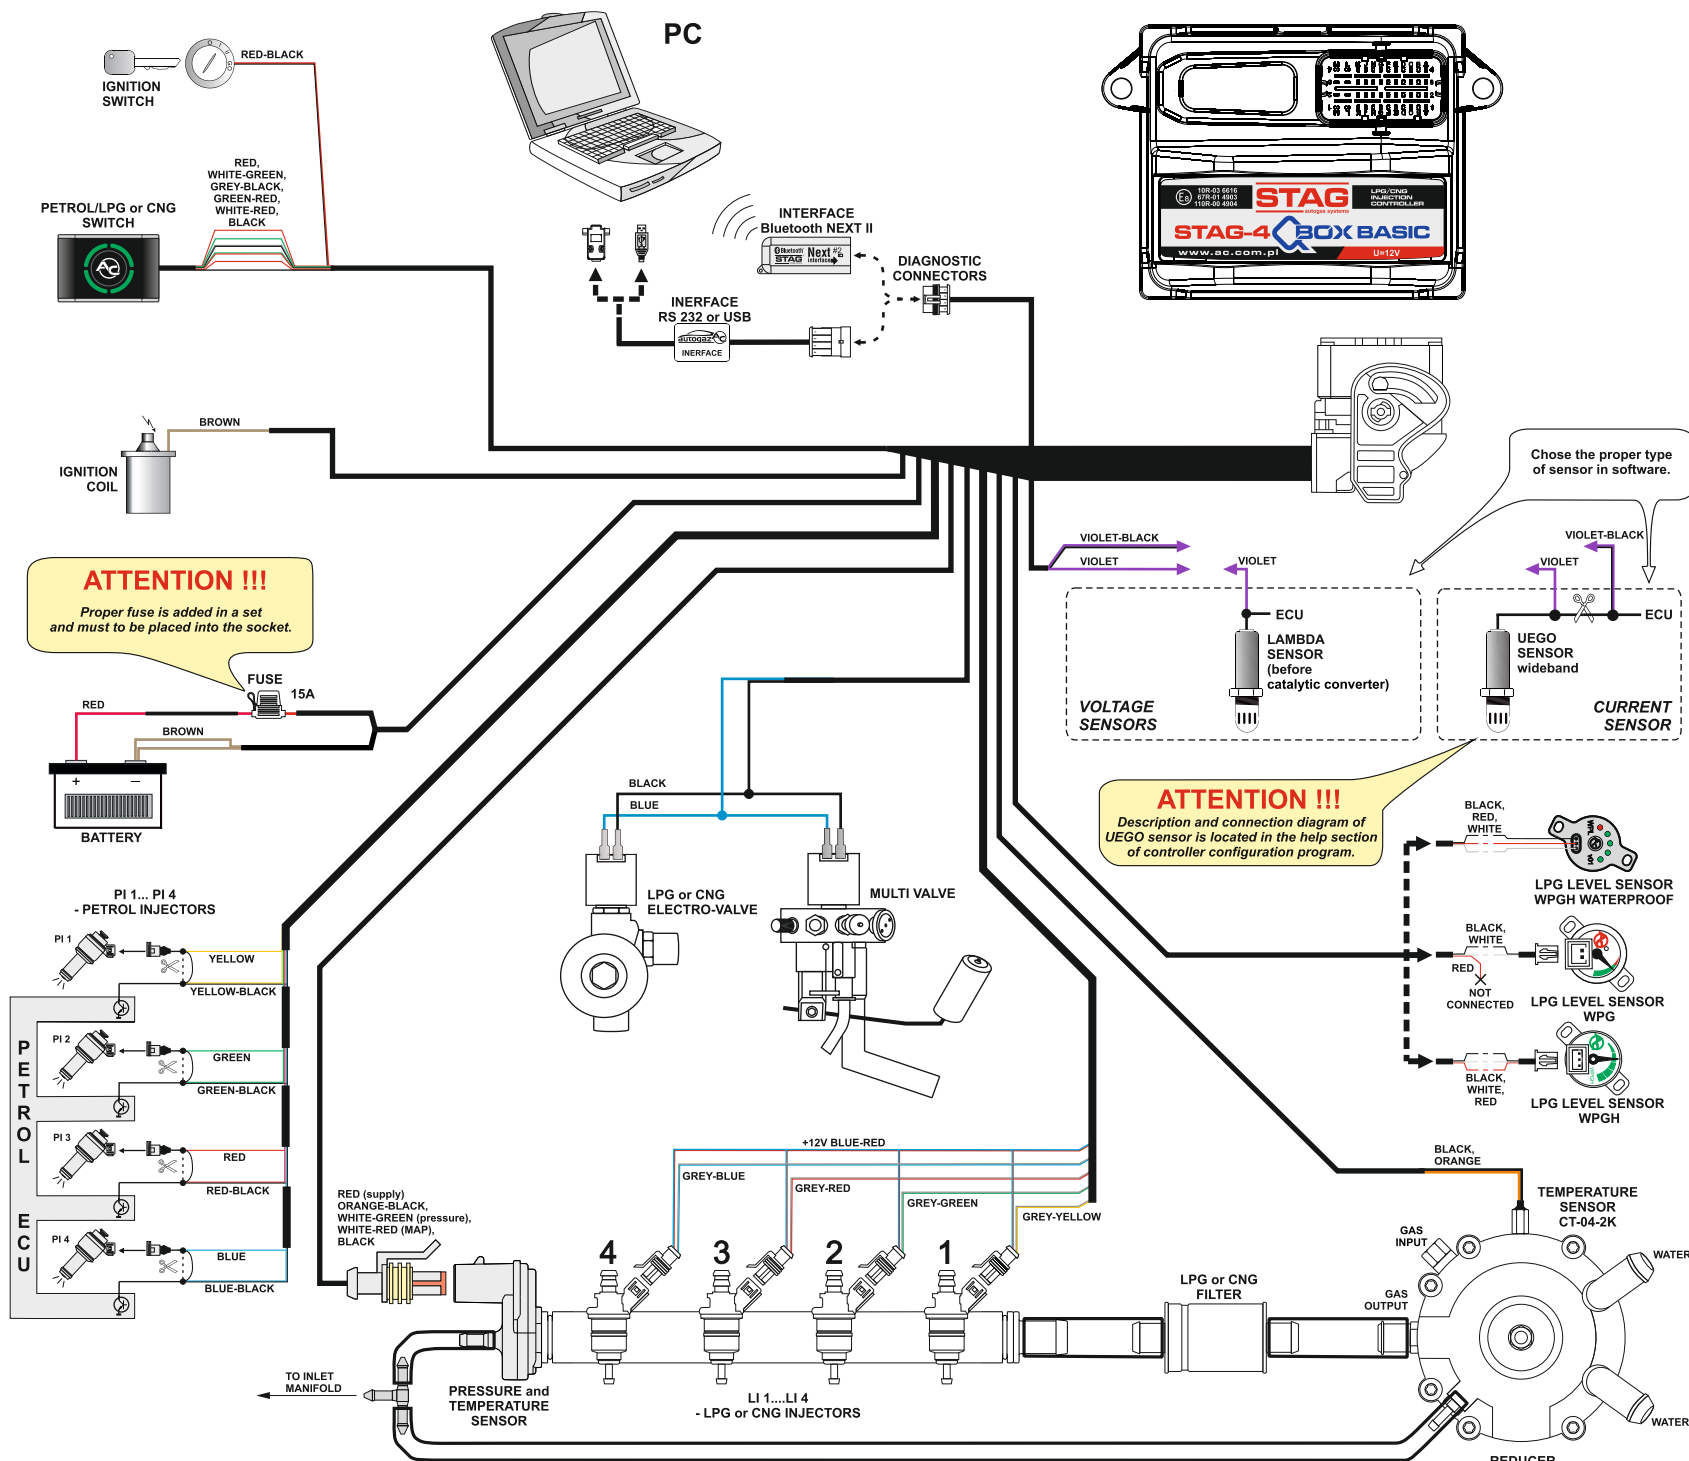


Схема подключения к автомобильной установке

STAG-4 QBOX BASIC

10R - 03 6616
67R - 01 4903
110R - 00 4904

"04-112.95.00.5 z dn. 13.01.2021"

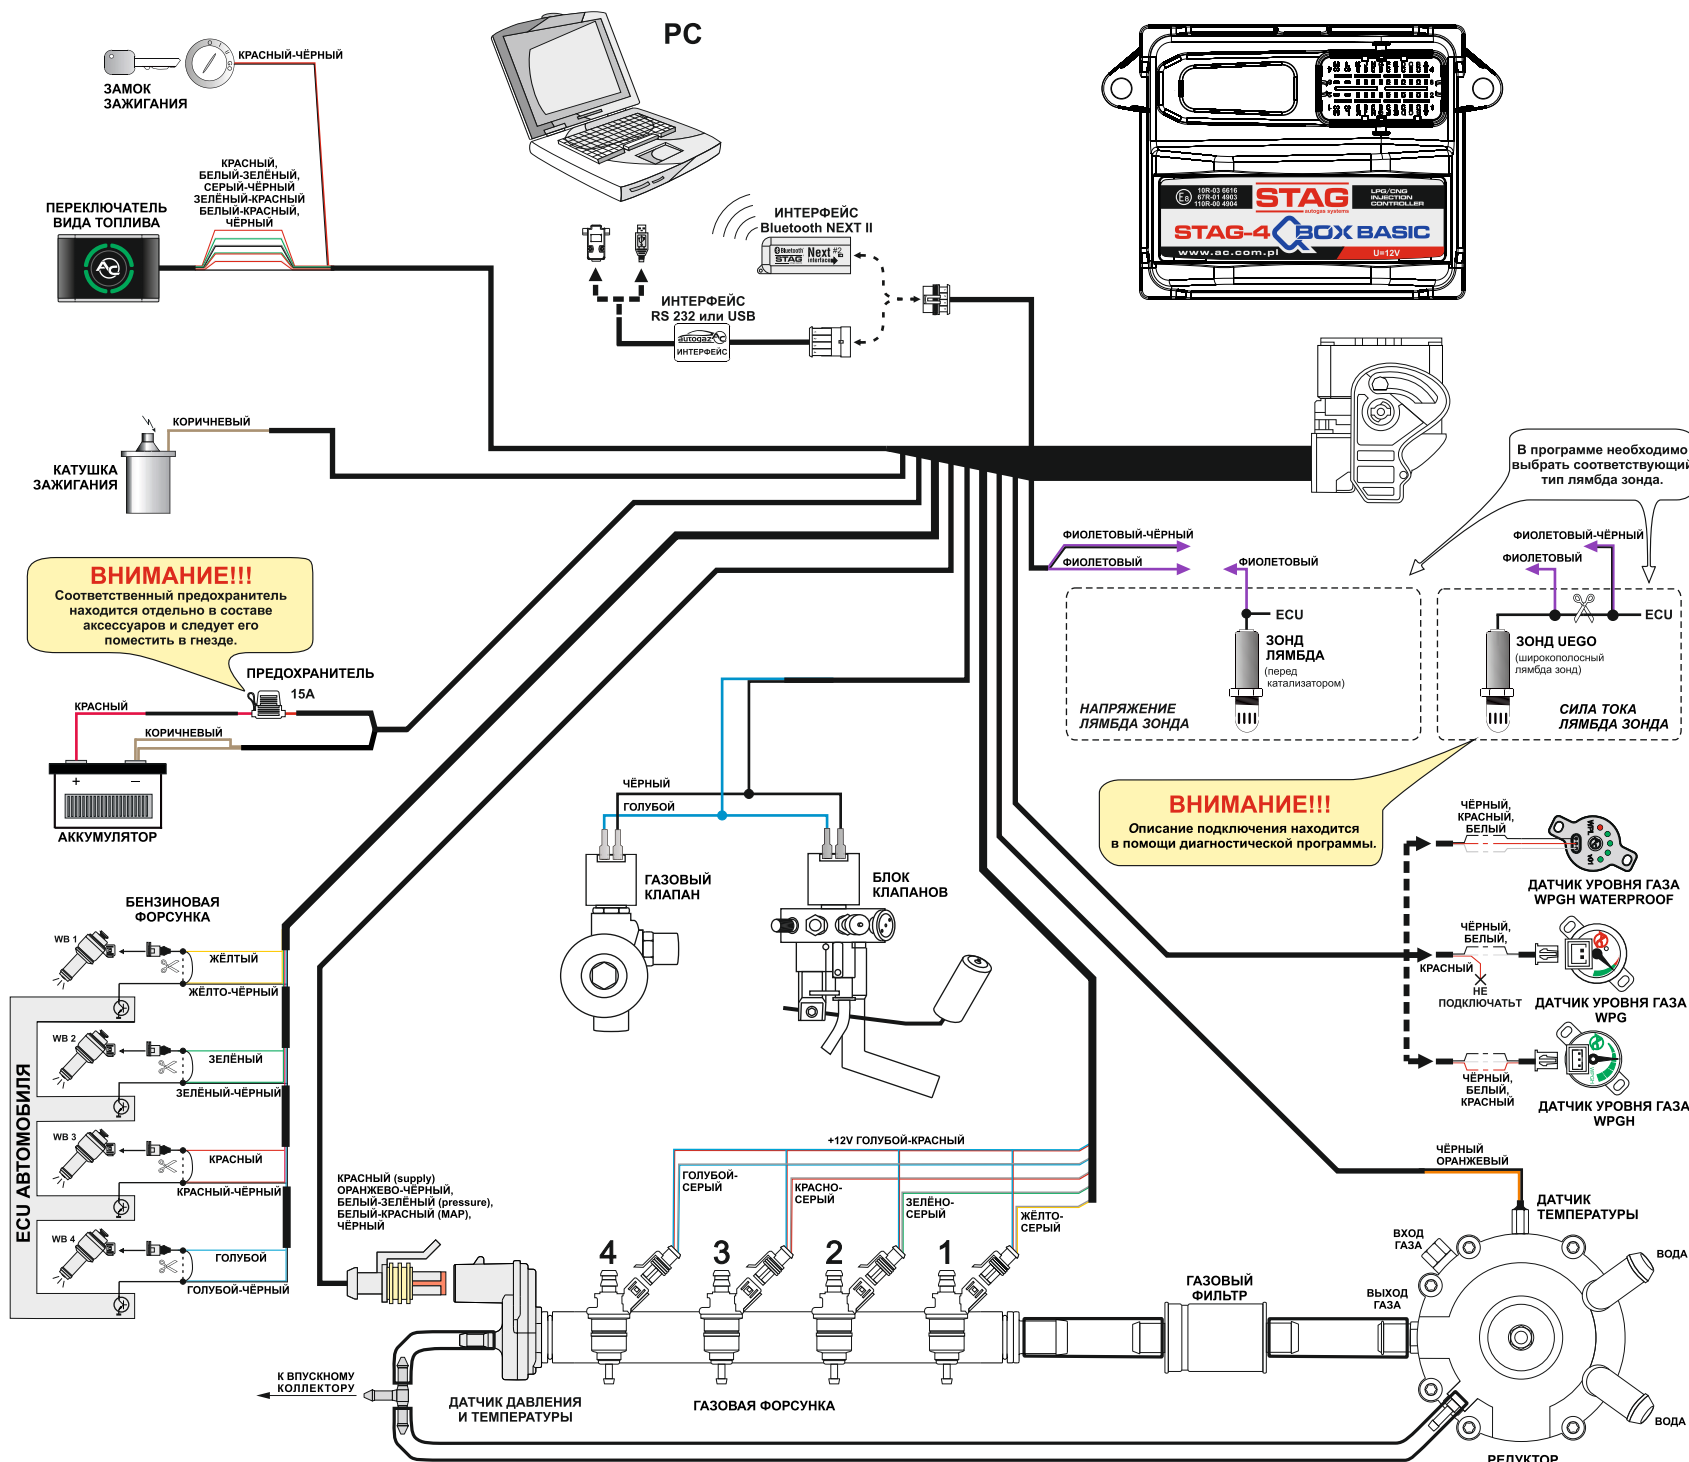

Esquema de conexión a la Instalación del vehículo.

STAG-4 QBOX BASIC

10R - 03 6616
67R - 01 4903
110R - 00 4904

"04-112.95.00.5 z dn. 13.01.2021"

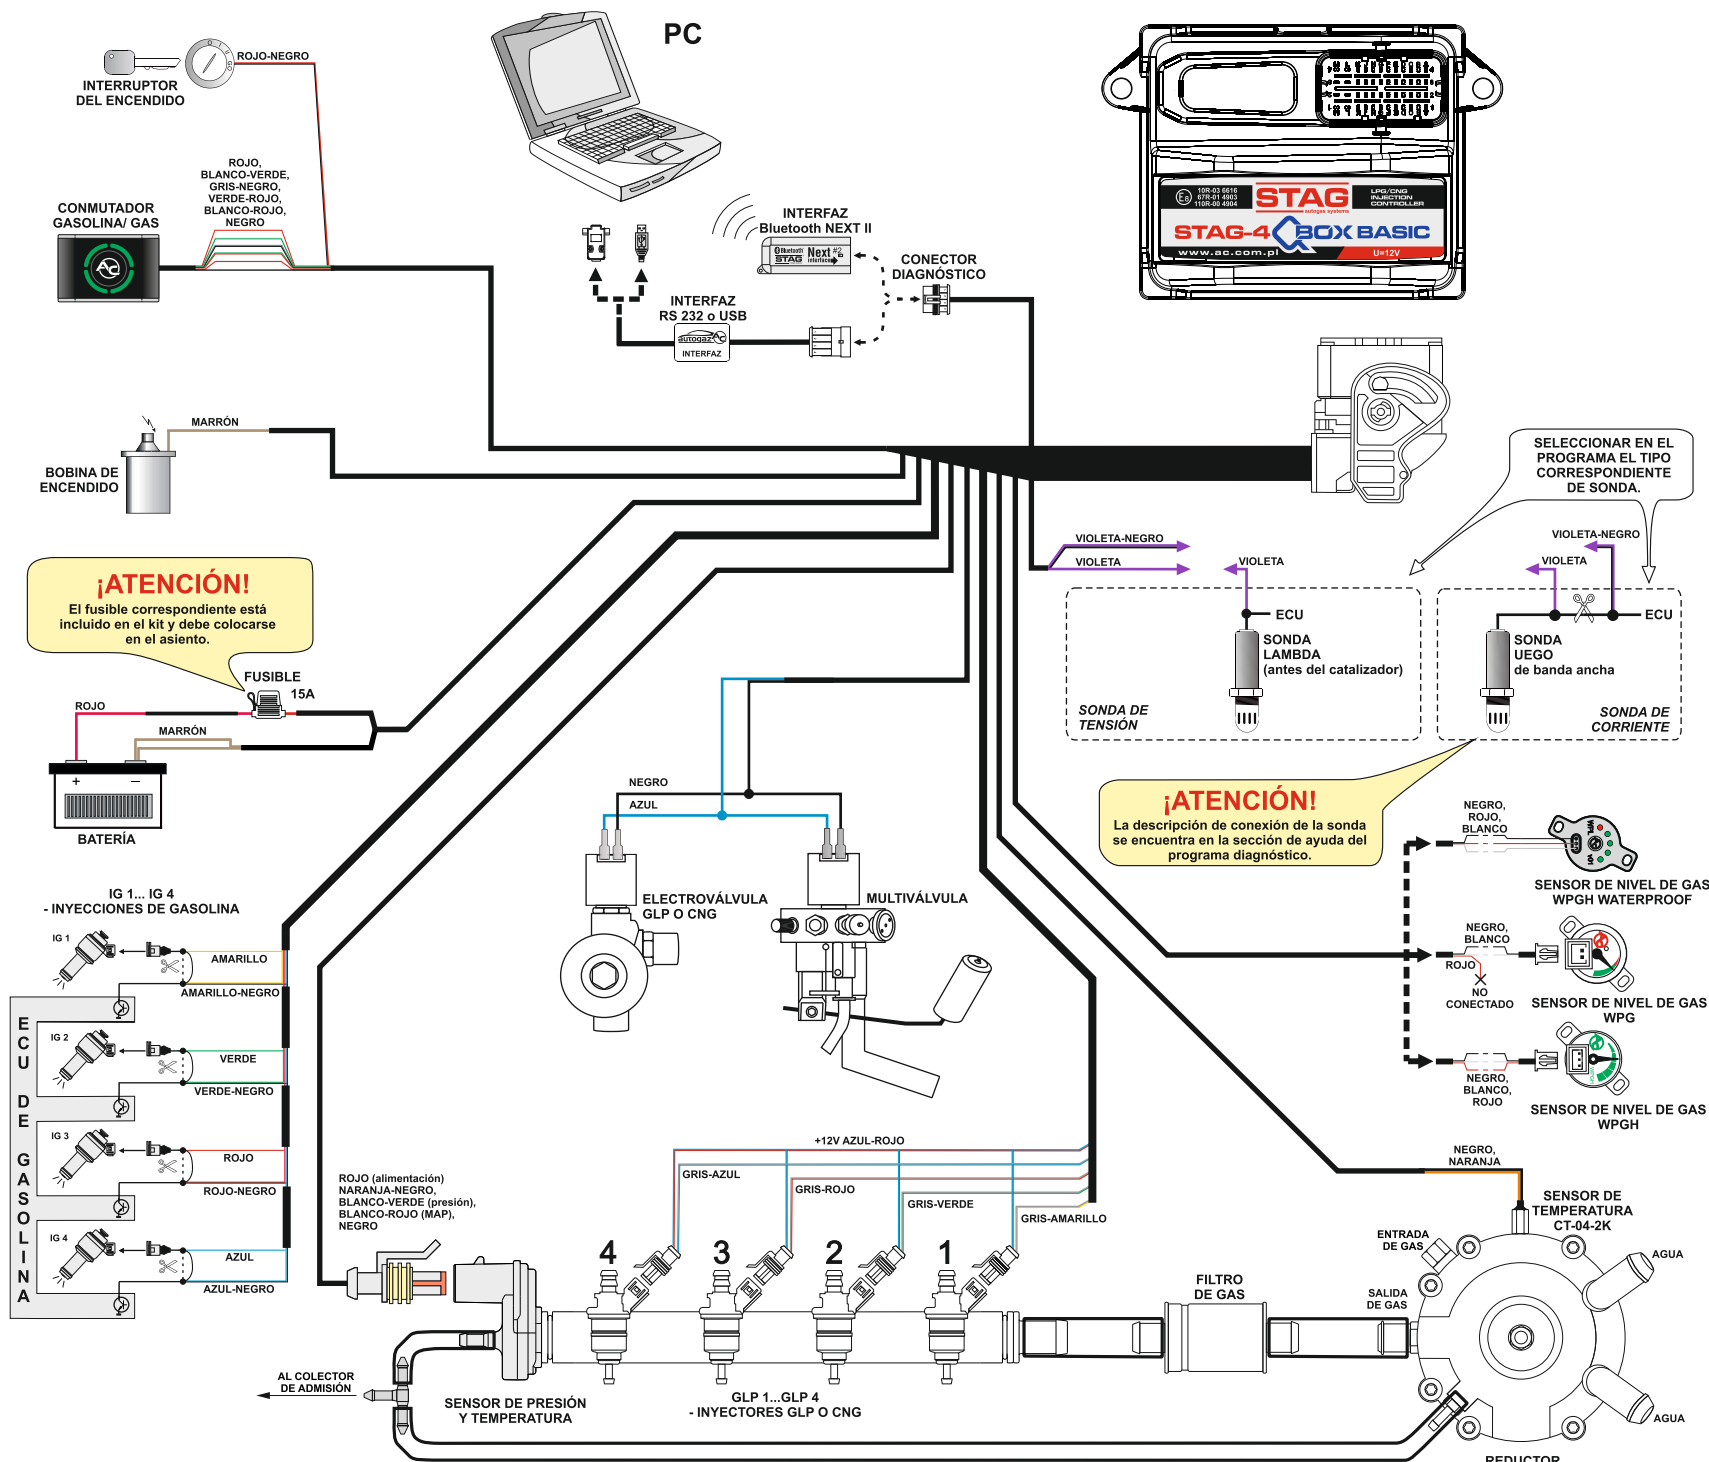


Diagrama de fiação

STAG-4 QBOX BASIC

E8

10R - 03 6616
67R - 01 4903
110R - 00 4904

"04-112.95.00.5 z dn. 13.01.2021"



AC S.A.
15-181 Białystok, ul. 42 Pulku Piechoty 50
tel. +48 85 743 81 00, fax +48 85 653 93 83
www.ac.com.pl | info@ac.com.pl

